V1516
User Manual

Legal Notices
All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of "VIDEOCON" is prohibited. "VIDEOCON" operates on a policy of continuous development. "VIDEOCON" reserves the right to make changes and improvements to any of the products described in this document without prior notice. Under no circumstances shall "VIDEOCON" be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.
The contents of this document are provided as it is. Except as required by applicable law, no warranties of any kind, either deselected or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. "VIDEOCON" reserves the right to revise this document or withdraw it at any time without prior notice. The availability of particular products may vary by region. Please check with "VIDEOCON" Executive.

II. SOFTWARE UPDATE INFORMATION

To enhance device performance, we recommend that you get in touch with the nearest "VIDEOCON" Authorized Service Center, regarding the availability of updated firmware for your device. Please see the enclosed Service Center Directory for the Authorized Service Center nearest to your location.

III. SAFETY PRECAUTIONS

Please comply with these precautions to avoid putting yourself or other around you in a dangerous or illegal situation, and ensure peak performance of your device.

Icons	Description
	ROAD SAFETY Do not use your device while driving.
	INTERFERENCE All wireless devices could affect your device performance.
	HOSPITALS Switch off the device near hospitals and medical equipment.
	AIRCRAFT Switch off the device in aircraft. Wireless devices can cause interference in aircraft.
	REFUELLING Switch off the device when refueling. Do not use the device at refueling point.

	BLASTING AREAS Switch off the device near blasting areas.
	USE SENSIBLY Use in normal condition. Do not touch the antenna unnecessarily.
	QUALIFIED SERVICE Only qualified personnel may install or repair phone.
	BATTERIES Use only approved batteries. Do not connect incompatible products.
	WATER-RESISTANCE Your device is not water-resistant. Keep it dry.

Important safety measures
Your phone is designed to comply with all the necessary precautions and requirements and should be treated with care. The suggested safety measures will help you to use this product without causing you any health hazard.
- When buying a cell phone, make sure it has a low SAR (Specific Absorption Rate).
- Use a wireless hands-free system (headphone, headset) with a low power Bluetooth emitter.
- Either keep calls short or send a SMS instead. This advice applies especially to children adolescents and pregnant women.
- Whenever possible, only use cell phone when the signal quality is good
- People having active medical implants should keep their cell phone at least 15cm away from the implant
- The FCC advice: "Many people mistakenly assume that using a cell phone with a lower reported SAR value necessarily decreases a user's exposure to RF emissions, or is somehow "safer" than using a cell phone with a high SAR value. While SAR values are an important tool in judging the maximum possible exposure to RF energy from a particular model of cell phone, a single SAR value does not provide sufficient information about the amount of RF exposure under typical usage conditions to reliably compare individual cell phone models."
- World Health Organization (WHO) Advice: Organizations such as the World Health Organization and the US Food and Drug Administration have stated that if people are concerned and want to reduce their exposure they could use a hands-free device to keep the phone away from the head and body during phone calls, or reduce the amount of time spent on the phone.

IV. DISCLAIMER

Some applications accessible through your mobile belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Those applications are provided solely for your personal noncommercial

use. You may not use any application in a manner that has not been authorized by the application owner or provider.
"Third party content and services are provided "as is." "VIDEOCON" does not warrant content or services so provided, either expressly or impliedly, for any purpose. "VIDEOCON" expressly disclaims any implied warranties, including but not limited to, warranties of merchantability or fitness for a particular purpose. "VIDEOCON" does not guarantee the accuracy, validity, timeliness, legality, or completeness of any content or service made available through this device and under no circumstances, including negligence, shall "VIDEOCON" be liable, whether in contract or tort, for any direct, indirect, incidental, special or consequential damages, attorney fees, expenses, or any other damages arising out of, or in connection with, any information contained in, or as a result of the use of any content or service by you or any third party, even if advised of the possibility of such damages." Third party services may be terminated or interrupted at any time, and "VIDEOCON" makes no representation or warranty that any content or service will remain available for any period of time.
Videocon reserves the right, in its sole discretion to change/modify/update the software (including without limitation, the availability of any feature or content) of the phone at any time without prior notice.
Content and services are transmitted by third parties by means of networks and transmission facilities over which "VIDEOCON" has no control. Without limiting the generality of this disclaimer, "VIDEOCON" expressly disclaims any responsibility or liability for any interruption or suspension of any content or service made available through this device.
"VIDEOCON" is neither responsible nor liable for customer service related to the content and services. Any question or request for service relating to the content or services should be made directly to the respective content and service providers.

V. SAR

Your phone meets the SAR requirements for exposure to radio waves, recommended by Govt. of India. Your mobile phone is a radio transmitter and receiver. It is designed and manufactured so as not to exceed the limits for exposure to radio-frequency (RF) energy, as recommended by the Govt. of India. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The limits include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.
The exposure standard for mobile phones employs a unit of measurement known as SAR (Specific Absorption Rate). The SAR limit recommended by the Govt. Of India is 1.6 Watt/kg taken over a volume containing a mass of 1 gram of issue. The highest SAR value for V1516 is **1.240** W/Kg. Press *#07# to check the SAR value on your phone display.

Phone Shortcuts
By default the Navigation key shortcuts are set as below:
UP: Camera
Down: Video player
Left : Write message
Right: FM Radio
Dedicated Music Key

General Information
Thank you for selecting our V1516 mobile phone. This user guide will provide you with the general information and operation instructions.

The package includes a chargeable battery, a charger and other accessories. Please refer to the Accessory section for details.

Note:
➢ Use only accessories approved by the phone manufacturer to ensure safety. Failing to comply with this will violate the terms and conditions of the warranty.
➢ If the contents and displays described in this user guide do not match the actual operation of the phone set, please use the display of the actual phone set. We reserved the rights to change the mechanisms of the phone without notice.
➢ This user guide is subject to change without notice.

1. Security

Emergency call
In any country, you can dial 112 (or other emergency call number) for emergency help.
Note:
➢ Based on the nature of cellular networking, the success of the emergency call cannot be guaranteed.

For your safety
- Switch off the phone in hospitals and aircraft. Obey any restrictions. Wireless devices can affect the medical treatment and cause interference in aircraft.
- Some medical devices such as hearing aids and pacemaker may be sensitive to external radio frequency emissions. Consult the device manufacturers or your doctor before using the phone around the medical devices.
- Pay special attention to the ring tone volume and vibration settings if you have a heart problem.
- In areas with potentially explosive atmosphere, such as gas stations, fuel or chemical transfer or storage facilities, obey all signs and instructions.
- You phone will emit radio frequency even in the standby mode. Turn off you

phone when so instructed.
- Always obey all the local laws and regulations. Do not use your phone while driving. Use Hands-free operation, if available, and give full attention to driving and to the road. Pull off the road and park before making or answering a call if driving conditions so require.
- If your phone is lost or stolen, notify your service provider immediately to stop the SIM card from being used.
- When you contact your service provider, they will need your IMEI number. It is printed on the back of your phone set (you can find it when you remove your battery), or call *#06# to look up your IMEI number. Copy this number and save it for future need.
- To prevent your phone from misuse, lock your SIM card or phone, and change passwords when necessary.
- Do not remove the battery without turning off the phone. Failure to follow this instruction may result in data lost.
- When you leave your vehicle, take the phone with you or place it in the glove compartment to avoid theft.
- Keep the phone, battery or charger out of reach of children.

Notices for your phone use
- Do not keep the phone near magnetic cards and other object with magnetism. The phone's magnetism may clear the information stored on floppy disk, pre-paid phone card and credit card.
- Use the phone near land phone, television, radio and office automatic devices may cause interference and affect the function of the mobile phone.
- Keep the phone dry, all kinds of liquid can erode the electronic circuit.
- Keep the phone away from extreme temperatures.
- Keep the phone away from hot places where the temperature may exceed 60℃, such as the dash board, windowsill, near fire or a lighted cigarette.
- Do not paint the phone.
- Do not drop the phone or violently crush or shake the phone.
- Do not disassemble or modify your phone. This can damage the phone, cause leakage and break the internal circuit.
- Use only damp cloth or non-static cloth to clean your phone. Do not use alcohol, thinner, benzene or other chemicals or abrasive cleaner to clean your phone.
- The phone will become warm under normal use and while in battery charging.
- Do not leave the phone with battery uninstalled or with the battery empty for a long period of time. This may cause data loss.
- The metal parts of the phone may irritate your skin depending on your health condition.
- Do not put the phone in the back pocket. Sitting on it may damage the phone. Do not put the phone on the bottom of a bag. You may crush it.

- When the vibrate mode is on, place the phone carefully to avoid it being dropped from a height or being moved to a heat source due to the vibrating.

Notice for batteries use
- Do not disassemble or modify your batteries, otherwise it can cause leakage, over heat, fire or explosion.
- Disposing battery in a fire can cause fire or explosion. Old batteries should be returned to your dealer or be disposed according to local regulations. Do not dispose the battery as household waste.
- Do not short the circuit of the battery with wires, needles or other metal objects, or store the batteries with necklace or other metal objects, otherwise it can cause leakage, over heat, fire or explosion.
- There is a risk of blinding if the liquid of the batteries gets into your eyes. In case of this, do not rub your eyes, you should rinse your eyes well with fresh water and go to the hospital immediately.
- If the leaked liquid of the battery touches the skin, it can burn the skin. Please wash your skin with fresh water and go to the hospital immediately.
- Never put the battery in your month. The liquid of the battery can be toxic.
- Stop using the battery when you find it became hotter, and change color and shape abnormally during use, charging or storing.
- Keep the batteries dry.
- Do not use or store batteries near fire, heater and other place with high temperature, otherwise it can result in leakage, over heat, fire or explosion. Store the battery in a cool and ventilated place without direct sun light.
- Do not charge the battery for more than 24 hours.
- The battery can be charged and discharged for hundreds of times but it will eventually wear out. The battery life is shortened with each charging.
- When replacing the battery, use only the batteries approved by the phone manufacturer. Damage resulting from using un-authorized batteries will not be covered by warranty.

Traffic safety
- Do not use your phone when driving a vehicle. Give full attention to driving and to the road. Provided there is an emergency, stop your vehicle in a safe place and then use your phone. Please obey all the local traffic laws and regulations.
- Normally the electronic systems in the vehicle should not be affected by the RF (Radio Frequency) signals from your wireless phone. However if you suspect any damage is resulting from the RF of your phone, contact your car dealer. Stop using your phone in the car until a qualified technician clears the problem.
- Turn off your phone when in the gas station or any place where using wireless equipment is prohibited. Do not place or transport your phone with inflammables or explosives, the internal sparkle may cause fire.

Airplane safety
- Power off your phone before boarding, the use of a wireless phone in an airplane will be dangerous to the operation of the airplane and disrupt the wireless telephone network and maybe illegal. Failure to observe these instructions may lead to law suit or denial of GSM cellular network service to the offender.
- Should there be an emergency situation, contact crew member.

2. Getting Started

2.1. Assembling the device

Gently hold the back cover of the device and slide in downward direction to open

2.2. Batteries

The battery is included in the package. It is not fully charged out of factory but it may still be able to power on your phone. Please completely use up the power of the battery and then charge it for at least 12 hours with your phone turned off. You battery will reach its optimal state after three cycles of charge and discharge.

2.2.1. Installing and uninstalling the battery

To install the battery, remove the back cover from the phone by pressing firmly on the cover and slide it down. Align the golden contacts of the battery to the contacts in the phone, and then gently snap down the battery into place. Re-assemble the back cover.
To uninstall the battery, flip the battery out from the bottom of the battery.

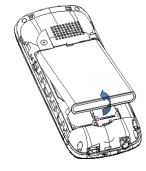

2.2.2. Charging the battery

Plug the charger into the socket on the side of your phone. Connect the charger to an AC wall socket. The blinking of the battery level icon indicates the battery is being charged. When the blinking stops, it indicates the charging is finished

During charging, the phone and charger will feel warm to the touch. This is normal.

Warning:
➢ The operating ambient temperature of the charger is 0℃-50℃. Do not use it when the temperature exceeds this limit.
➢ Use only chargers approved by the phone manufacturer to ensure safety. Failing to comply with this will violate the terms and conditions of the warranty.

2.2.3. Using the battery

The waiting time and calling time capacities specified by the phone manufacturer are obtained under the ideal operating environment. The actual values will vary with the network condition, operating environment and operation method. Please comply with the local regulations of disposing the battery (such as recycling). Do not dispose it as household waste.

2.2.4. Using the Headset jack

2.2.5. Battery level indicator

When the phone is on, the battery level indicator is located at the upper right corner of the screen.

2.3. Connecting to the Network

2.3.1. SIM card

Please insert available Subscriber Identity Module (SIM) card into your phone before using it. SIM card is supplied by your network carrier.
All the information related to network connection is recorded on the SIM card, so are the contact information such as names, phone numbers and SMS that you set to store on the SIM. You can take out the SIM card from the phone and insert it into another GSM phone to use it. Most new phones will recognize the SIM card automatically.
Do not touch the golden contacts of the SIM card and place it away from electricity and magnetism to avoid damage. You will not be able to use the phone if the SIM card is damaged.
Note:
➢ Before inserting and taking out the SIM card, always make sure that the phone is switched off and disconnected from any external power source; otherwise both the phone and the SIM card may be damaged.

2.3.2. Installing and uninstalling the SIM card and Memory Card.

The SIM card usually comes attached to a special card. The metal contacts of SIM card is easily damaged by scratching, so take it out carefully before assembling it into the phone.
Switch off the phone; remove the back cover, battery and other external power source. Fit the SIM card into the SIM card slot. Align the angled corner of the SIM card with the slot. Slide in the SIM card, make sure it is in place, install the battery, and restore the back cover.
Likewise, to remove the SIM card, switch off the phone, remove the battery and then take out the SIM card.

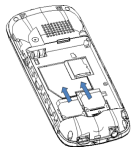

Insert memory card. Take compatible micro SD card, and place it into its respective slot.

2.3.3. Unlock the SIM card

PIN code
Your Personal Identification Number (PIN) code protects the SIM card against unauthorized use. Your

PIN code is usually supplied with the SIM card. If this security function is enabled, you need to enter the PIN code every time you turn on the phone. You can also disable this function.
To unlock the SIM card, press and hold the power button to turn on the phone. Enter the PIN code. After three consecutive incorrect PIN code entries, the code is blocked, and you need the PUK code to unblock it.
PUK code
This code is required to change a locked PIN code. If the code is not supplied with the SIM card, contact your service provider. After ten consecutive incorrect PUK code entries, the SIM card cannot be used any more. Please contact your service provider to buy a new SIM card. You cannot edit PUK code. If it is lost, Please contact your service provider.

2.3.4. Connecting to the network

After the SIM card is unlocked, you phone will automatically search for the registered network or other local available network. Once connected, the name of the network carrier will appear on the top of the screen.
You phone is now in Standby mode, ready for making and receiving calls.

2.4. Text Input Method

This phone provides various text input methods that allow you to use less key strokes to input and search for text:
- ABC/abc input method
- Hindu input method
- Numbers 123 input

Phone Layout

2.5. Notification Icons

Indicator icons provide useful information about the device, including battery level, network signal strength, current date & time, Bluetooth status and so

forth.

Icon	Description
	Battery level Indicator
	Network signal Strength,
	Network signal Strength, SIM2
	Roaming is active for SIM1
	Roaming is active for SIM2
	Memory card inserted
	Unread messages
	Alarm is activated
	General profile is active
	Outdoor Profile is Active
	Meeting Profile is Active
	Silent Profile is Active
	Earphone inserted
	Bluetooth activated

3. V-Connect

Operators functions of STK menu.

4. Call History

With this function, you can view the information of Call History.
Press **OK Key** and select Call Logs under the standby mode if you are desired to enter in this function.

4.1. Call history

In the call history, you can carry out the following operations: view the call history, edit the call history, save the call history to phonebook, add the call history to the blacklist, delete the call history, you can also view the call time and call cost.
Select any a log, Press **Left Soft Key** to enter the Option list:
➢ **View:** View the detail of the current call.
➢ **Call:** Call the current number.
➢ **Send message:** Directly input the SMS and send it to the current number.
➢ **Save To Phonebook:** save to phonebook.
➢ **Add To Blacklist:** Add the number to black list and block the same number to call you.
➢ **Edit Before Call**，Call to edit the number before the call record contacts.

➢ **Delete:** Delete the current logs.

4.2. Call Timers
Record of all the talk time of all calls received/dialed by SIM1/2. Here we can reset the timer also.

4.3. Text Msg. Counter
SMS reception count

5. Fun Zone

5.1. Fun Zone Applications
We can enjoy the applications such as Voice Chat, Jobs on phone, Cricket Alerts, Love Guru, Naughty Jokes, Mehfil-e-Timepass, Astrology, Art of Living, Daal Mein Kala, Pull Services and these applications are chargeable as their respective charges.

5.2. Games
The phone's built- F1 Race and Game Settings

6. User Profiles
Enter in the function; display the profile mode list including **General, Silent, Meeting, Outdoor, Headset**.
Select one mode (Silent mode cannot be modified) and enter the option menu:
➢ **Activate:** Activate the profile mode.
➢ **Customize:** Customize the profile mode as following:
• **Alert Type:** Set the alert type such as Ring only、Vib only, Vib. And ring, Vib. Then ring.
• **Ring Type:** Set the ring type such as Repeat、Ascending、Beep once.
• **SIM1/2 Incoming Call:** Set the ringtone for the SIM1/2 incoming call. You can also select ringtone from T card.
• **Ringtone Volume:** Set the ringtone volume of the incoming call.
• **SIM1/2 message:** Select the ringtone for the SIM1/2 message. You can also select the ringtone from T card.
• **Message Volume:** Set the volume for message ringtone.
• **Keypad:** Select the ringtone for keypad.
• **Keytone Volume:** Set the volume for the keypad.
• **Power On:** Select the ringtone for the power on.
• **Power Off:** Select the ringtone for the power on.
• **System Alert:** On /off the system alert.
➢ **Reset:** Reset the setting to the default.
After plugging in the headset, ringtone will output from the headset as well as the phone, when there is incoming call or message.

7. Messages
You can send and receive the SMS as well as use Cell Location Display with this function.

This chapter introduces the message services provided by the GSM network. Some services may not be supported by the local network.

7.1. Write message
➢ **Send to:** Input number and then send SMS to the input number.
➢ **Input method:** Change the input method.
➢ **Advanced:** Insert phone number
• **Insert Number:** Insert the number of the contacts.
• **Insert Name:** Insert the phone book name.
➢ **Save to Draft:** Save the SMS in the Draft box.

Select [send to] to enter in the sending window after finishing the creation of the SMS. Select [Enter number] or [Add from phonebook] to search a phone number of the receiver and finally press **Left Soft Key**:
• **Send:** Send the SMS to sender
• **Edit Recipient:** Edit the recipient number.
• **Remove Recipient:** Delete the selected recipient.
• **Remove All Recipients:** Delete all recipients.
• **Save to Draft:** Save the SMS in the Draft box.
Press **OK Key** to send the SMS.

7.2. Inbox
The Inbox lists the received SMS.
You can view the received SMS with this function. Select an entry of SMS and press <Option> under the inbox SMS list window to perform:
➢ **View:** View the selected message.
➢ **Reply:** Reply the SMS to the sender;
➢ **Call sender:** Call the sender of the selected message.
➢ **Forward:** Forward the SMS to other via SIM card 1/ 2;
➢ **Delete:** Delete the selected entry of the message;
➢ **Delete all:** Delete all messages
➢ **Sort by:** Sort the sender、subject、unread/read、message size.
➢ **Filter by:** filter SIM1、SIM2、all messages.
➢ **Mark Several:** Delete the marked messages at the same time.
➢ **Advanced:** Press **OK Key** under this window to perform:
• **Copy to phone:** current information copy to the phone.
• **Copy to SIM1/2:** current information copy to the SIM1/2.
• **Move to phone:** current information to move to the phone.
• **Move to SIM1/2:** current information to move to the SIM1/2.
• **Copy All:** Between the phone and SIM card copy.
• **Move All:** Between the phone and SIM card move.

7.3. Drafts
Saved and unsent message are saved here.
Press **OK Key** to enter SIM1 drafts. And press **Left Soft Key** under the Drafts

list window to perform:
➢ **View:** View the selected message.
➢ **Send:** Send the selected message.
➢ **Edit:** Edit the selected message.
➢ **Delete:** Delete the selected entry of the message;
➢ **Delete All:** Delete all messages
➢ **Sort by:** Sort the recipient、subject、message size
➢ **Mark several:** Mark several messages to delete at the same time.
➢ **Advanced:** Press [OK] under this window to perform:
• **Copy to phone:** current information copy to the phone.
• **Copy to SIM1/2:** current information copy to the SIM1/2.
• **Move to phone:** current information to move to the phone.
• **Move to SIM1/2:** current information to move to the SIM1/2.
• **Copy All:** Between the phone and SIM card copy.
• **Move All:** Between the phone and SIM card move.

7.4. Outbox
The unsent out-going messages are listed here.
Your options include:
➢ **View:** View the selected message.
➢ **Resend:** Send the selected message.
➢ **Edit:** Edit the selected message.
➢ **Delete:** Delete the selected entry of the message;
➢ **Delete all:** Delete all messages
➢ **Sort by:** Sort the recipient、subject、message size
➢ **Mark several:** Mark several messages to delete at the same time.
➢ **Advanced:** Press [OK] under this window to perform:
• **Copy to phone:** current information copy to the phone.
• **Copy to SIM1/2:** current information copy to the SIM1/2.
• **Move to phone:** current information to move to the phone.
• **Move to SIM1/2:** current information to move to the SIM1/2.
• **Copy All:** Between the phone and SIM card copy.
• **Move All:** Between the phone and SIM card move.

7.5. Sent Messages
Sent messages are saved here. Your options include:
➢ **View:** View the selected message.
➢ **Forward:** Forward the SMS to other via SIM card 1/ 2;
➢ **Delete:** Delete the selected entry of the message;
➢ **Delete all:** Delete all messages
➢ **Sort by:** Sort the recipient、subject、message size
➢ **Mark several:** Mark several messages to delete at the same time.
➢ **Advanced:**

• **Copy to phone:** current information copy to the phone.
• **Copy to SIM1/2:** current information copy to the SIM1/2.
• **Move to phone:** current information to move to the phone.
• **Move to SIM1/2:** current information to move to the SIM1/2.
• **Copy All:** Between the phone and SIM card copy.
• **Move All:** Between the phone and SIM card move.

7.6. Broadcast Messages
Look up the broadcast messages. Your options include:
• **Receive Mode:** Turn on or turn off cell broadcasting.
• **Channels settings:** You can add, edit channel and can delete the current channel and cancel the read.
• **Languages:** set the cell broadcast language.
• **Read Messages:** Save read cell broadcast information.

7.7. SMS settings
Select the Text message card **(SIM1/SIM2)**:
• **Memory status:** View the quantity of SMS saved in the phone memories.
• **Save sent message:** Select to keep sending SMS on/off.
• **Preferred storage:** Select to save the SMS in phone or memory card.

7.8. Schedule SMS
You can set the timing to send a text message

8. Multimedia

8.1. Camera
With this function, you can snap. Press **OK Key** to snap under the view-finding window.
Enter Camera Option, Your options include:
• **Switch to video recorder:** Switch to video interface.
• **Image viewer:** Enter in the album folder.
• **Camera Settings:** Set up the camera.
• **Image Settings:** Set up the photo parameters.
• **White Balance:** Adjust the color balance of the photo.
• **Scene Mode:** Set up the scene mode.
• **Restore Default:** Recover all settings into the initial values.

8.2. Image Viewer
You can view the photos snapped with the camera through this function.
Select a photo file and press **<Option>** under the photo list window
➢ **View:** View the selected image.
➢ **Details:** Show some information of image.
➢ **Browse Style:** You can select list style or matrix style.
➢ **Send:** Send the selected image to Bluetooth.
➢ **Use as:** Send the selected image file to the wallpaper, to screen saver or to phonebook.

➢ **Rename:** Change the name of the image.
➢ **Delete:** Delete the selected image.
➢ **Storage:** Select the photos storage.

8.3. Video recorder
In video recorder, your options include:
➢ **Switch to camera:** Switch to the camera interface.
➢ **Camcorder Settings:** Set up the video recorder.
➢ **Video Settings:** Set up the video parameters.

8.4. Video player
You can play the video with this function. Select a video and press [OK] Key under the video list window and begin to play. You can use the following keys during the play.

Key	Function
Left key	Press to go backwards. Press and hold to continuously go backwards.
Right key	Press to go forwards. Press and hold to continuously go forwards.
OK Key	Press to play/pause the video.
Left soft key	Press to go to Options.
Right soft key	Press to stop the video and go back
UP key	Press to increase the volume
Down key	Press to decrease the volume
*** Key**	Press to enter/exit Full screen view

8.5. Audio Player
You can enjoy the music with this function. You can use the following keys during the play.

Key	Function
Left Key	Press to switch to a previous song with cursor. Press and hold: go backwards
Right Key	Press to switch to a next song with cursor. Press and hold: go forwards
UP Key	Press to the stop the audio.
Down Key	Press to go to playlist.

Press **Left Soft Key** to view Play list, your options include:
➢ **Play:** Play the currently-selected song.
➢ **Details:** View the detailed information of the currently-selected song.

➢ **Refresh list:** Refresh the list of current list
➢ **Settings:** Set up the music player.
• **List auto gen.**: set up to on/off the function.
• **Repeat:** Set up to open/close the function. If you open the function, you can select repeat Once or repeat All
• **Shuffle:** Set up to open/close the function.
• **Background play:** Set up to open/close the function.

8.6. Sound Recorder
You can take a recorder in this function.
After record, access Options:
➢ **New record:** Select this option to record the sound.
➢ **List:** View the currently-selected sound files.
➢ **Play:** Play the selected sound.
➢ **Append:** Continuously record after the previous record file and append it after the record file.
➢ **Rename:** Rename the selected sound.
➢ **Delete:** Delete the selected sound.
➢ **Settings:** Entering this option you can set audio quality.
➢ **Use as:** Set as SIM1/SIM2 user profiles.
➢ **Send:** Send sound file to Bluetooth.

8.7. FM radio
You can choose options including:
• **Channel List:** Play, edit or delete the saved channels.
• **Manual Input:** Manually input the channel to search.
• **Auto Search:** Automatically search the channel.
• **Settings:** Set up to receive the FM broadcast at the backstage or receive the FM broadcast with the speaker as well as set up the record format and voice quality.
• **Record:** Record the currently-hearing FM.
• **File List:** List all recorded files.

9. Alarm
You can set up that the alarm clock will ring at a specific time with this function.
Setup of Alarm Clock
Select an alarm clock and enter into alarm clock setup window.
Set up the alarm clock with the following options:
• Set the alarm clock status as opened or closed.
• Set the alarm clock time.
• Set the repeat, once, Everyday, Days.
• Select the snooze time.
• Set the Alert type.
After setting please save the change.

10.Phonebook
You can save a phone number in the memories of SIM cards or phone.
Press **RSK Key** under the idle mode on the main screen and then select Phonebook if you desire to enter in the function.
Select a contact in the contact list window and press **OK Key** to perform:
➢ **View:** Display the current number.
➢ **Send Text Message:** Directly input the SMS and send it to the searched phone number.
➢ **Call:** Call the current contact.
➢ **Edit:** Edit the current contact.
➢ **Delete:** Delete the current contact.
➢ **Copy:** Copy the current contact.
➢ **Send Business Card:** Through the SMS, Bluetooth to send VCard.
➢ **Add to Blacklist:** Will the current contact added to the blacklist list.
➢ **Mark several:** Mark the contact, and then send SMS or delete marked.
➢ **Caller groups:** In order to facilitate the address book managements, you can contact will be added to the different groups respectively. Can set for each group alone group the bell
➢ **Phonebook settings:** You can manage the phonebook with this function.
• Preferred Selection: You can select Preferred Selection in SIM1, SIM2, phone or all.
• Speed dial: You can assign the quick dial numbers (2-9) to the 8 frequently-used phone numbers.
• Memory status: View the quantity of phone saved in the SIM cards or phone memories.
• Copy Contacts: Copy contacts between phone and SIM card.
• Move Contacts: Move contacts between phone and SIM card.
• Delete All Contacts: Such as the title.

11.File Manager
The File Manager lists the all the files stored in your memory card.

12.Settings
You can set up various functions for the phone with this function.

12.1. Dual SIM settings
You can set up two SIM cards or activate single SIM at a time with this function.

12.2. Phone settings
You can customize your favorite phone functions based on your interest with this

function.
➢ **Time and Date:** You can set home city, set time and date, set format for your phone.
➢ **Language:** Set the current system language.
➢ **Pref. input method:** Select the default input method.

12.3. Display
• **Wallpaper:** Select your favorite picture as the wallpaper of the standby window.
• **Screen Saver:** Select waiting time and picture for the screen protection. You can open or close this function.
• **Show date and time:** On or off display time.
➢ **Shortcuts:** You can set the direction key designated menu.
➢ **Dedicated Keys:** You can set the direction key designated menu.
➢ **Auto Update Time:** To update time automatically
➢ **Flight mode:** You can set up two SIM card flight modes.
• **LCD Backlight:** here are set LCD brightness and time.

12.4. Call settings
➢ **Caller ID:** Need the support of operators.
➢ **Call waiting:** The network will inform you for a newly incoming call during the call. Please contact with your network operator to launch or close the function because the function requires the network support.
➢ **Call divert:** Divert an incoming call to a designated phone number under the presetting condition. This function can be launched or closed.
➢ **Call barring:** Set up the right of calling and answering. This function requires the network support. You can launch or close the function.
➢ **Line switching:** Switch the line between line 1 and line 2.

12.4.1. Advance settings
➢ **Blacklist:** Select a Contact to blacklist, in order not to receive any calls from the number.
➢ **Auto redial:** Set up whether the phone is tempted to redial when the call fails in connection.
➢ **Call time reminder:** Select to release prompt tone during the call in each integral minute time.
➢ **Auto Call Record:** Open automatically replay, dial-up connection failed to automatically replay.
➢ **Reject by SMS:** Turn on or turn off this feature.
➢ **Answer mode:** You can select any key or Auto answer when headset mode.

12.5. Network settings

You can set up the phone network with this function.
SIM1/SIM2 network settings
➢ **Network selection:** choice the modes of searching the phone network, including Auto and Manual modes.

12.6. Security settings
You can manage your phone safely with this function.

The phone lock password, SIM1/SIM2 card password and PIN2 support 4-8digit numbers, do not support other characters. The original password of the phone when leaving the factory is 1122. The password and PIN2 of SIM card are provided by the network operator. When the PIN/PIN2 is input wrongly in successively three times, the SIM card will be locked.

The PUK /PUK2 are required to input if you want to unlock the SIM card. The PUK/PUK2 is provided by the network operator. If the PUK is input wrongly in successively 10 times, the SIM card will be locked and discarded permanently.

12.6.1. SIM1/2 security
• **PIN lock:** open or close the PIN lock function. When PIN lock is launched, the PIN shall be input upon each power-on.
• **Change PIN:** PIN lock must be enabled, Just can be change.
• **Change PIN2:** input the correct PIN 2. Just can be change.
The SIM2 security setup is same to the SIM1 security setup.

12.6.2. Phone security
• **Phone lock**
Open or close the phone lock function. When the phone lock is launched, the phone lock password shall be input upon each power-on.
• **Change password**
You can change the phone password.

12.6.3. Auto Keypad Lock
Set to lock the keypad.

12.6.4. Privacy protection
Input the correct password into the interface of Data security in first.
➢ **Setting:** Set the modules of the privacy protection. These modules include Phonebook, Messages, Call history, Image viewer, Video player, File manager, Keypad lock.
If you select these modules for Data security, you must input the correct password when you want to view these modules.

12.6.5. Mobile tracker
You can track your phone if the phone gets lost.

12.7. Restore factory settings
You can recover the phone into the initial setting with this function.

13.Organizer

13.1. Calendar
The screen will highlight the date of today after displays the monthly calendar when you enter in the calendar function.
Press **Left Key** or **Right Key** to move by day.
Press **up Key** or **Down Key** to move by week.

Options will include
• Jump to Date: Jump to the date you wish for.
• Go to today: Return to the present day
• Go to weekly view: View the calendar by week.
• Panchangam: See the basic Indian days as per the Indian panchang as Day, Tithi, Paksha, Month, Year.
• Festival list: See the yearly festival list
• Settings: Set English or India calendar.
• Help: A brief description of India calendar.

13.2. World clock
You can view the current local time of various countries.

13.3. Bluetooth
Your options include:
➢ **Power:** Open or close the Bluetooth
➢ **Visibility:** Open or close the visibility.
➢ **My device:** Show the device which is connected
➢ **Search audio device:** Search for the audio device.
➢ **My name:** Show off the name of Bluetooth.
➢ **Advanced:** set up Audio path, Sharing permission and view the address of Bluetooth.
➢ **Audio path:** You can select leave in phone or forward to Bluetooth headset.
➢ **My address:** View Bluetooth address.

14.Extra
➢ **Torch:** Press on or off to use torch.
➢ **Calculator**
To access calculator, press **Menu→Organizer→Calculator.**
Your phone comes with in-built conversion application that you can use to

perform calculations on a daily basis, such as addition, subtraction, division, and multiplication.
To make a calculation:
1. Enter the first number of the calculation. Select **Clear** to delete the last digit entered.
2. Select a function, '+' (Up navigation key), '÷' (Right navigation key), '-'(Down navigation key) or '×' (left navigation key).
3. Enter the second number of the calculation, and select **OK** to get the result

15. Appendix

15.1FAQ
The phone cannot be turned on
When the battery is very low, the phone may not be turned on properly. Please charge the battery.

Cannot make certain calls
Check if Call Barring is set. If it is set, you may not be able to make calls or only certain calls are allowed.

My call is picked up by another phone
Check if call divert is set. If it is set, your incoming calls may be diverted to other numbers or devices.

15.2Error Message
Please insert SIM card
Make sure you have inserted SIM card. If you have installed it but it cannot be detected, please try clean the golden contacts of the SIM card by using a dry cloth. If it still is not working, please contact your network carrier.

No service
If you are in an area not covered by your network, or if a physical obstacle is present, such as in an enclosed area, the message "No service" will be displayed on your Standby screen and you will not be able to make or receive calls. You can try move closer to a window for better reception.

For emergency only
When you are outside your network but inside other network, you can only make emergency call.

No Valid SIM card
Your SIM card is locked or it has an error. Please insert the right SIM card or contact your service provider.

Enter PUK code
After three consecutive incorrect PIN code entries, the code is blocked, and you need the PUK code to unblock it. Contact your service provider. After seven consecutive incorrect PUK code entries, the SIM card cannot be used any more. Please contact your service provider to buy a new SIM card.

15.3Care and maintenance
Thank you for choosing our phone. Should you encounter any problem with the phone, please contact our dealer or qualified service provider.

Your phone is a finely designed and crafted product. Please use it with care. The following instructions will help you comply with the terms of the warranty and enjoy this product for many years:

• Keep the phone and all its parts and accessories out of the reach of children.
• Keep the phone dry, all kinds of liquid will erode the electronic circuit.
• Do not use or store the phone in a dusty place to avoid damaging the removable parts.
• Keep the phone away from hot places, high temperature can shorten the life of electronic device, warp or melt certain plastic and damage batteries.
• Do not attempt to open or disassemble the phone, non-expert handling may damage it.
• Do not drop, crush or shake the phone to avoid damaging the internal circuit board.
• Do not use harsh chemicals, cleaning solvents or strong detergent to clean the phone.
• Do not paint the phone or the paint may obstruct the removable parts and affect operation.
• Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone Do not hold the external antenna when the phone is in use. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed. In addition, use of unauthorized antennas may result in non-compliance with the local regulatory requirements in your country.

The above instructions apply to your phone, battery, charger and other accessories. If any of them does not work properly, please send it to a qualified service provider.